

# SECTION 1


## GENERAL DESCRIPTIONS

### OPERATING INSTRUCTIONS (V-204B)

1


## IDENTIFICATION OF CONTROLS

### Front Panel

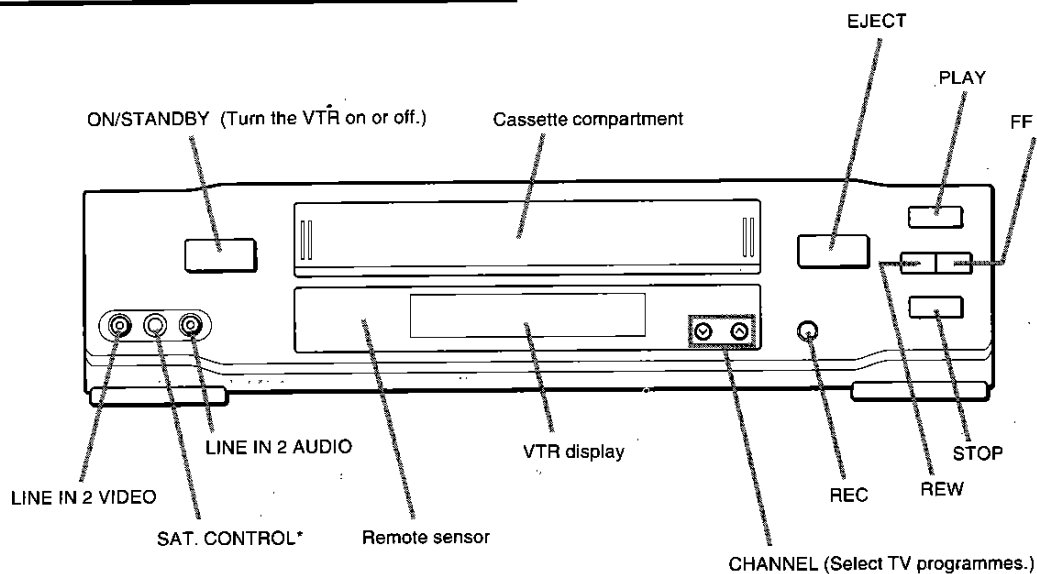


\*This jack is for a special case of satellite receiver setting. Not in general use.

### Rear Panel

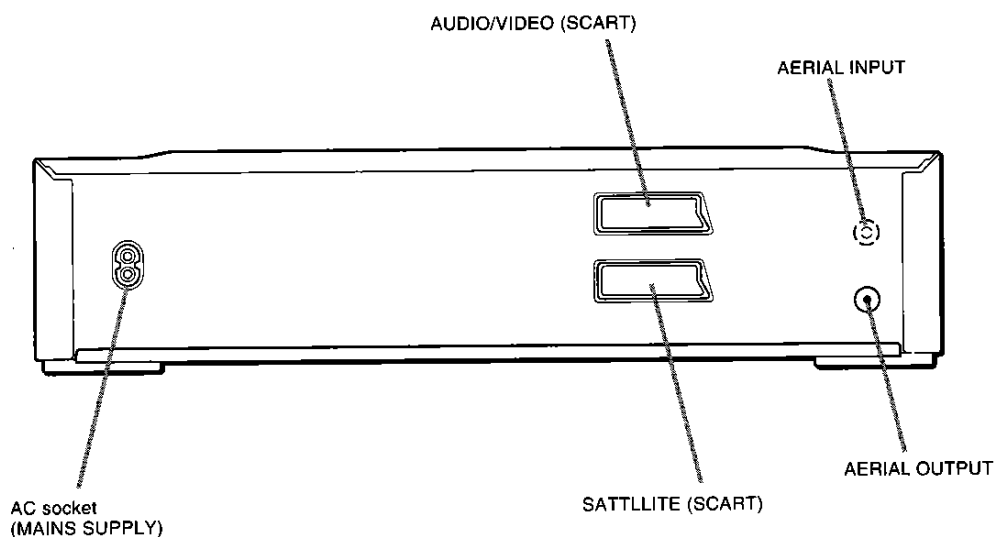


## VTR Display

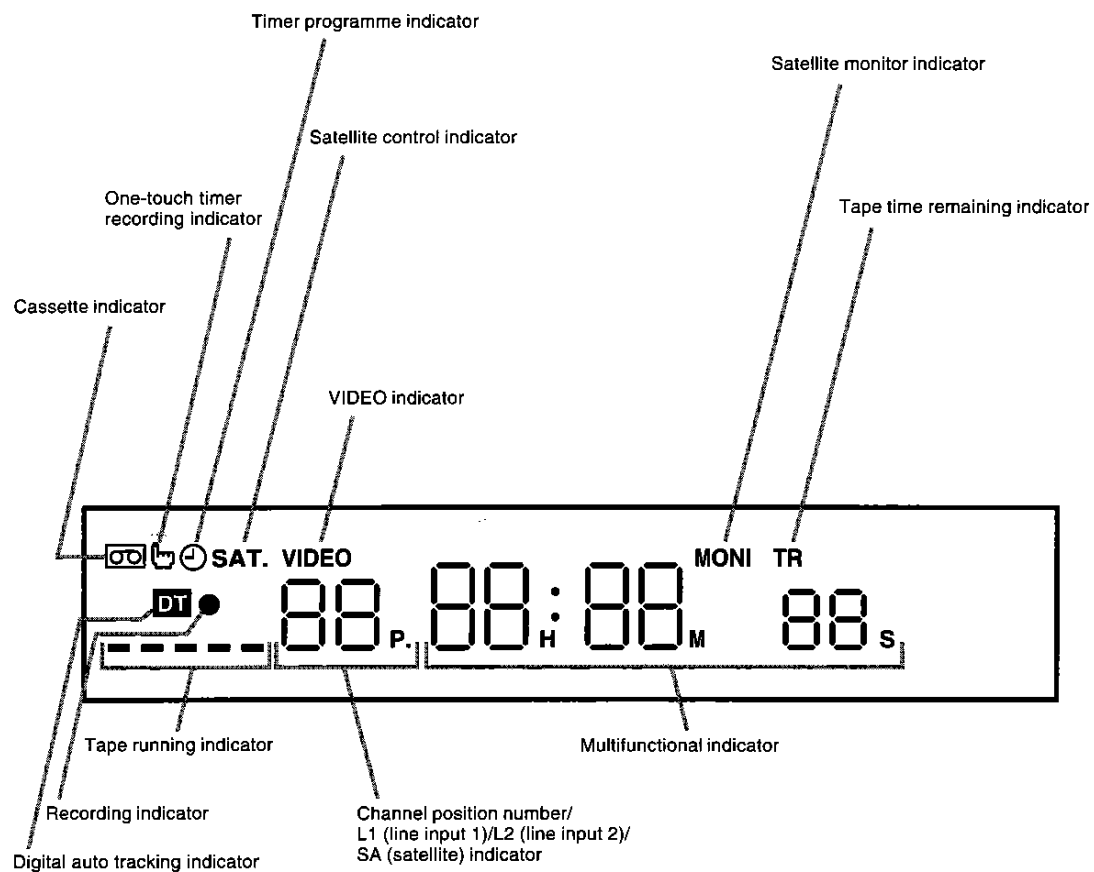

# 1

## IDENTIFICATION OF CONTROLS

### Remote Controller

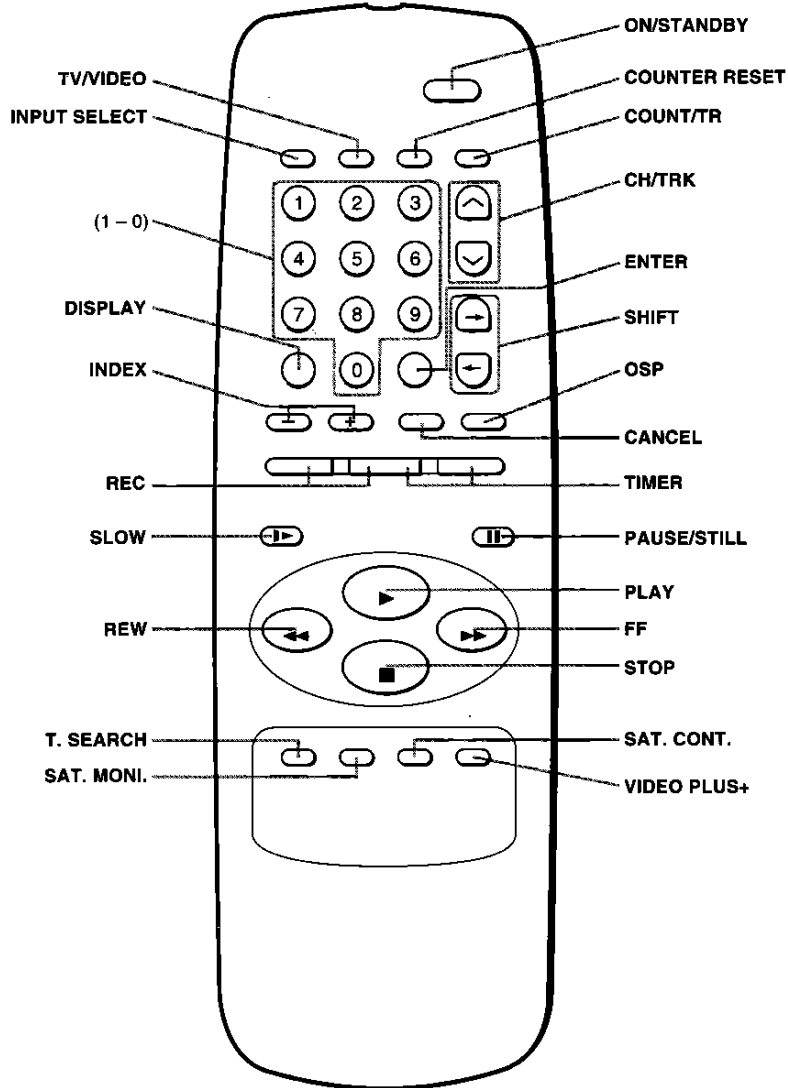

# 2

## HOW TO ALLOCATE A TV CHANNEL TO THE VIDEO CHANNEL


To watch or record video pictures when your TV and VTR are connected only by aerial, you need to tune your VTR into a TV channel (eg. 5).

### Important

The following adjustment is necessary when the VTR is connected to the TV via the AERIAL OUTPUT socket only.

### Information

The VTR converts the received signals into the type of output signals used in TV broadcasts, and send them to your TV from the AERIAL OUTPUT socket. Your television must have a channel set aside exclusively for these VTR signals. This is called the video channel.

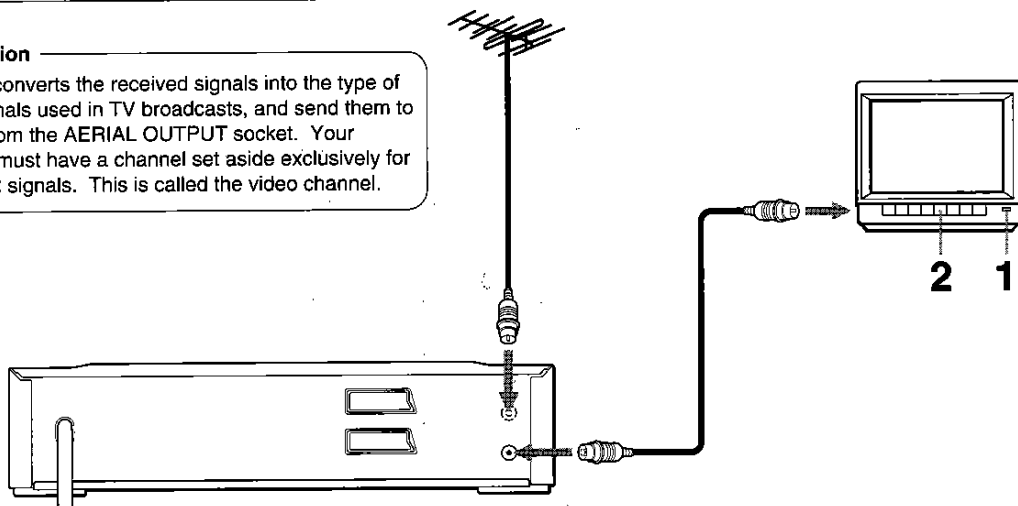

1 Turn on the TV.

2 Select a free station on the TV which you wish to use for your video picture, for example station 5. This station 5 will be only used for watching a video picture.

3 Press the **ON/STANDBY** button to turn on the VTR.



4 Hold down the **OSP** button for more than 5 seconds.




VTR display

VIDEO

60 ch

5 Tune the TV (on station 5 for example in step 2) so that the following screen is shown clearly.  
(For tuning the TV, refer to the TV's manual.)

TV screen

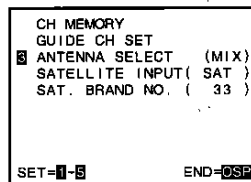

If after tuning (in step 5), you still have some interference because of neighbouring broadcast channels, press the **SHIFT** button to select another video channel eg. between channels 53 and 67.




VIDEO

62 ch

Re-tune the TV to around UHF channel 62 (for example), and confirm the screen is displayed clearly.

6 Press the **OSP** button.  
Video channel setting is complete.

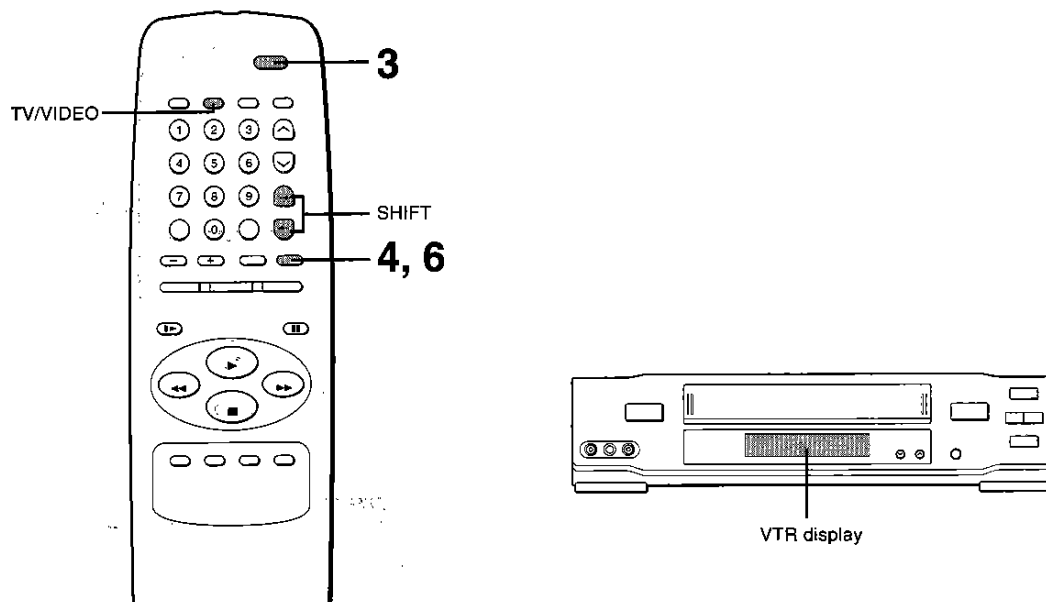


### ***Note on the Antenna Output***

On the screen in step 5, the antenna output can be set to "MIX" or "SW".

(Applied only when the VTR is connected to your TV only via the AERIAL OUTPUT socket.)

Press **number button 3** to set "MIX" or "SW".

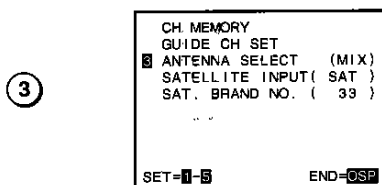

**MIX:** You can watch a video picture on the video channel regardless of whether or not you have pressed the TV/VIDEO button.

The switch should only be set to "SW" if the video picture on TV pictures cannot be obtained clearly.

**SW:** You can watch a video picture on the video channel only when the "VIDEO" indicator is lit in the VTR display by pressing the TV/VIDEO button.


# 2

## MENU/SETUP SCREEN

You can set desired functions on the TV screen.

### Preparation

- Confirm the TV is on and set it to the video input mode, or select the video channel if you made the aerial connection for the TV and the VTR.

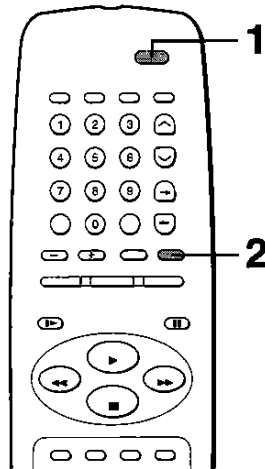


### MENU Screen


- Press the **ON/STANDBY** button to turn the VTR on.




- Press the **OSP** button.  
The MENU screen appears.

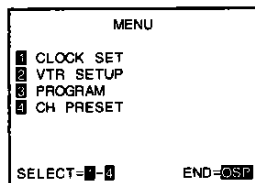

### SETUP Screen

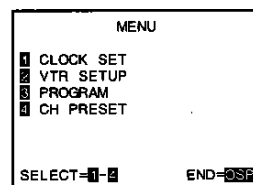

Press **number button 2**.  
The **SETUP** screen will appear on the TV.

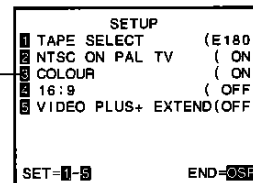

If the TV programme or the tape is monochrome, press **number button 3** to set to "OFF".


# 2

## ON SCREEN DISPLAY

The VTR tells you current operating modes on the TV screen.

### Information

- When you press the **DISPLAY** button, the VTR displays the current operating mode on the TV screen.
- In addition to the indication shown below, the VTR may display other indications such as index search. See respective pages for each explanation.

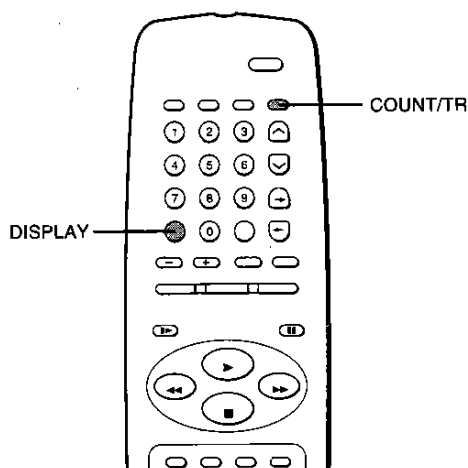


Pressing the **DISPLAY** button makes the operating mode appear. If you press this button again, the indication goes off, leaving the counter indication (counter, tape remaining, clock) on the screen. To turn it off, press the **DISPLAY** button once more.

### Counter indication

- Linear time counter
- Tape time remaining
- Clock

Each time the **COUNT/TR** button is pressed, the indication changes.

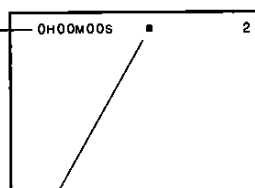

### Channel position number

The indicator varies with the operating mode.

Ejecting a tape	⏏
Stop	■
Fast-forwarding Forward picture search	⏩
Rewinding Reverse picture search	⏪
Recording	●
Recording pause	⏸
Playback	▶
Still picture Frame advance	⏮
Slow playback	⏭

# 2

## HOW TO ALLOCATE TV STATIONS ON THE VTR


To watch and record TV programmes via the VTR, it is first necessary to store each TV station in the memory of the VTR. This VTR can store up to 48 positions for TV broadcasting stations.

### Information

Each TV station operating in the U.K. (eg. BBC1, ITV) broadcasts on a unique frequency, which in turn has been allocated a transmission channel number (21 - 69). However, this unique frequency and corresponding number changes for each TV station from area to area. For example, BBC1 in London uses channel number 26, while in Oxford BBC1 uses channel number 57 (i.e., CH57). This VTR will indicate these channel numbers (21 - 69) during tuning.

### Preparation

- Select the video channel or video input mode on the TV.
- Turn on the VTR.
- If you use a satellite receiver, make the connection correctly and turn it on.

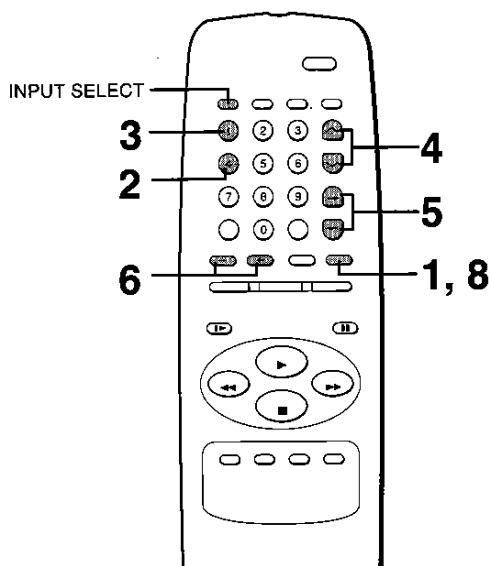

### Example

to store BBC1 to position number 1 on your VTR.

Allocation of the TV stations into the memory of the VTR is expected to be as follows, for Video Plus+ recording.

BBC1:	Position number 1
BBC2:	Position number 2
ITV:	Position number 3
CHANNEL 4:	Position number 4
Satellite:	Position number 10 (example) (if not connected via SCART)


### Important

If the "L1", "L2" or "SA" indicator appears in the VTR display, press the INPUT SELECT button so that the position number appears.




L1 → L2 → SA → 4

- 1 Press the **OSP** button.

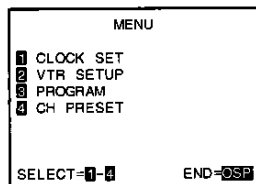

- 2 Press number button 4.

④

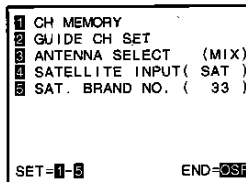

- 3 Press number button 1 to select "CH MEMORY". The VTR enters the tuning mode.

VTR display	Example
①	4.p. 02 ch
Position number	TV channel number (any No. of 1 - 9, 21 - 69)

- 4 Press the **CH/TRK** button to select position number 1 for this example.



- 5 Repeatedly press the **SHIFT** button until BBC1 is found.




Higher-numbered channel  
Lower-numbered channel



- If the received TV station signal is not BBC1, press the **SHIFT** button again.



- 6** If a clear picture does not appear on the TV screen after searching is finished, make fine adjustment with the **INDEX** buttons.

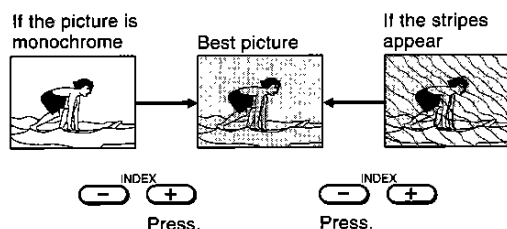

- 7** Repeat steps 4 to 6 for other TV stations and your satellite receiver if not connected by a SCART.

BBC2 on position number 2  
 ITV on position number 3  
 CHANNEL 4 on position number 4  
 Satellite on position number 10

Record all position numbers you stored on the VTR in the chart (GUIDE channel table) below so that you will be ready to use the Video Plus+ recording.

- 8** Press the **OSP** button.  
 Channel tuning is now complete.




Once channel tuning is done, you will select the TV station by selecting the position number on which the desired TV station is stored.

## Skiping Channels

 
You can prevent the use of certain channel position numbers when you use the skip function.

- 1) Set the VTR to the tuning mode following steps 1 to 3 of the channel storing procedure beginning.
- 2) Select the position number you want to skip with the **CH/TRK** button.

**Example:** to skip position number 4



- 3) Press **number button 3**.  
 The following indication will appear in the VTR display with the skip function on or off.

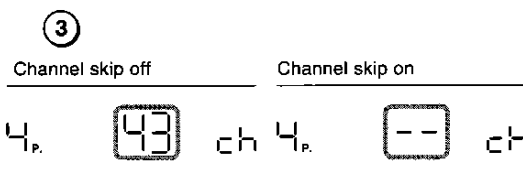

If you press **number button 3** again, the TV channel number will appear and the skip function will be cancelled.

- 4) Press the **OSP** button.  
 Channel skipping is now complete.

**To cancel channel skipping**  
 Follow steps 1) to 4) above.

## GUIDE Channel Table

Stations	GUIDE	Position number in which the TV station has been memorized on the VTR.	Stations	GUIDE	Position number in which the TV station has been memorized on the VTR.
BBC1	001	1	PRO 7	120	
BBC2	002	2	TELE 5	121	
ITV	003	3	TELECLUB	122	
CHANNEL 4	004	4	UK GOLD	123	
RTE (IRELAND)	005		DISCOVERY	124	
NETWORK 2 (IRELAND)	006		BRAVO / ADULT CHANNEL	125	
SKY ONE	101		CNN	126	
SKY NEWS	102		EURONEWS	127	
SKY MOVIES	103		THE LEARNING CHANNEL	128	
THE MOVIE CHANNEL	104		QVC	129	
SKY SPORT	105		UK LIVING	130	
NICKELODEON / NICK AT NIGHT	106		RAI 1	131	
EUROSPORT	107		RAI 2	132	
GALA VISION	108		TV5 EUROPE	133	
MTV EUROPE	109		TVE INTERNATIONAL	134	
CHILDREN'S / FAMILY & CHINESE CHANNEL	110		MBC/ARABIC	135	
SKY MOVIES GOLD	111		VTM	136	
BBC WORLD SERVICE	112		SPORTNET	137	
RTL 4	113		VIDEO HITS ONE	138	
FILMNET +	114		SUPERCHANNEL	144	
RTL PLUS INTERNATIONAL	115		JAPAN TV	145	
SAT 1	116		RTL-5	146	
PREMIERE	117		FILMNET MOVIES	147	
3 SAT	118		T.N.T./CARTOON NETWORK	149	

# 2

## SETTING THE CLOCK

When the VTR is first connected to the AC socket or after a power failure, 0:00 blinks in the VTR display and it is necessary to set the clock.


### Preparation

- Turn on the VTR.
- Select the video channel or video input mode on the TV.

### Information

The item to be set will blink. Set the data with the number buttons, following the blinking position. You can change the blinking position by pressing the SHIFT (→/←) buttons.

2 - 6

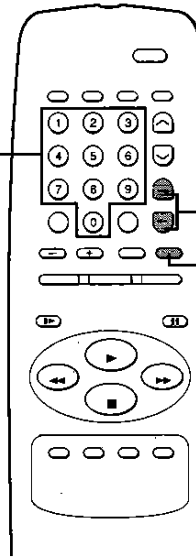


SHIFT

1, 7, 8

### Example


to set the clock to 15:30 on October 5, 1994.

- 1** Press the **OSP** button.

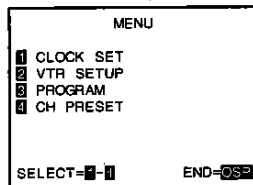

- 2** Press number button **1**.


①

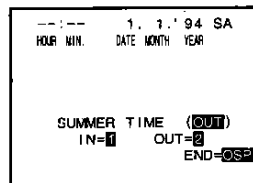

- 3** To set the clock for summer time (daylight saving), press **number button 1**: if not set, press **number button 2**.


①

②

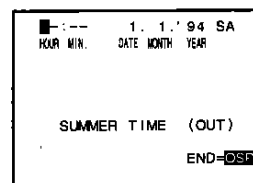

- 4** Set the hours and minutes. (24 hours clock format)

① → ⑤ → ③ → ①

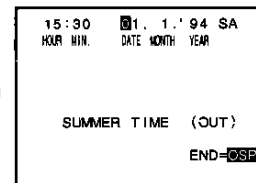


### Correcting a mistake



Press the SHIFT (←) button repeatedly until the number you set incorrectly blinks. Press the correct number button and then press the SHIFT (→) button to return to the previous digit.

- 5** Set the day and month.



① → ⑤ → ① → ①

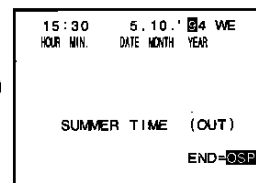

 - 6** Set the year.  
Press the numbers of the last two figures.

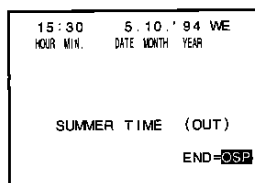

 - 7** Press the **OSP** button.  
Now the clock starts.

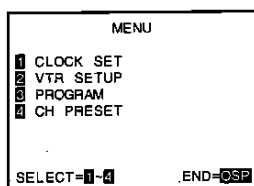


- 8** Press the **OSP** button to return to the normal TV screen.



### ***Resetting the VTR clock***

 If a power failure of short duration has occurred, the colon between the hour and minutes digits in the VTR display blinks.

The time displayed may be incorrect.



In this case, you must set the VTR clock again.  
Follow the clock setting procedure.

#### **Notes**

- If you input irregular clock data such as February 29, 1994, it will not be accepted.
- The built-in calendar of this VTR is valid from 1990 to 2089.


# 3

## NTSC-RECORDED TAPE PLAYBACK

This VTR can play back an NTSC-recorded tape. You can watch the playback picture on a PAL system TV or an NTSC 4.43 system TV.

### Information

**NTSC tape:** Tapes on which NTSC M system broadcasts mainly transmitted in the U.S. and Japan are recorded, and tapes recorded in the NTSC video system which are commercially available on the market. For the playback operation, see "PLAYBACK".

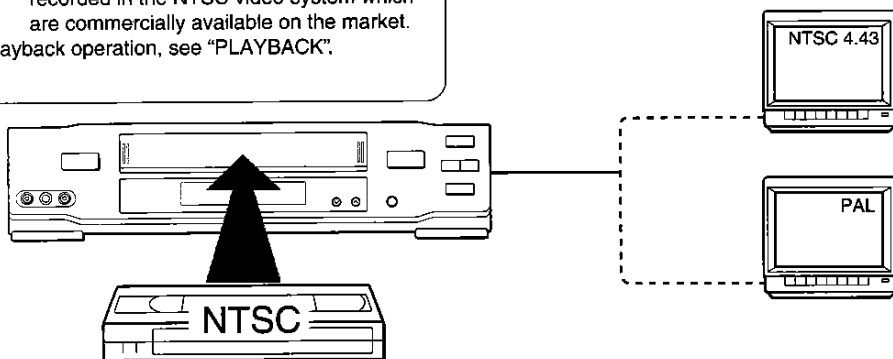

If you connect this VTR to a multi system TV (NTSC 4.43 compatible) and play back a NTSC tape



- 1 Press the **OSP** button.  
The MENU screen will appear on the TV.



- 2 Press **number button 2** to select "VTR SETUP".



- 3 Set "NTSC ON PAL TV" to "OFF" by pressing **number button 2**.



SETUP	
1 TAPE SELECT	(E180)
2 NTSC ON PAL TV	(OFF)
3 COLOUR	(ON)
4 16:9	(OFF)
5 VIDEO PLUS+ EXTEND	(OFF)
SET=1-5 END=OSP	

- 4 Press the **OSP** button twice to return to the normal TV screen.

If you connect this VTR to a PAL system TV and play back an NTSC tape



- 1 Press the **OSP** button.  
The MENU screen will appear on the TV.



- 2 Press **number button 2** to select "VTR SETUP".




- 3 Set "NTSC ON PAL TV" to "ON" by pressing **number button 2**.



SETUP	
1 TAPE SELECT	(E180)
2 NTSC ON PAL TV	(ON)
3 COLOUR	(ON)
4 16:9	(OFF)
5 VIDEO PLUS+ EXTEND	(OFF)
SET=1-5 END=OSP	

- 4 Press the **OSP** button twice to return to the normal TV screen.

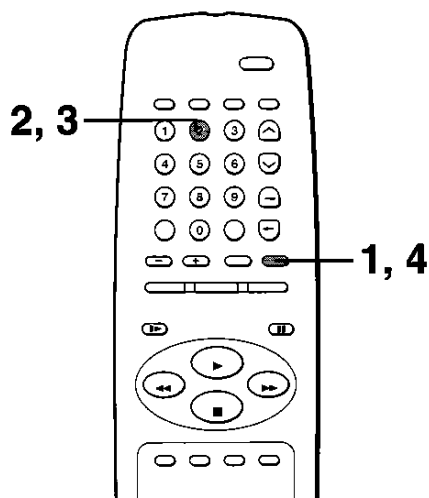

#### Notes for Using a PAL TV for NTSC Playback

- Use a TV compatible with PAL video signals of PAL 60 (525 lines).

When the TV, that is not compatible with PAL video signals of PAL 60, is used (when the TV, that is compatible only with PAL video signals of PAL 50 (625 lines), is used) NTSC playback pictures may roll up and down. This is not malfunction of the VTR or the TV.

If your TV is equipped with a V-HOLD control, it may be possible to stop the rolling of pictures by adjusting this control.

About PAL 50 and PAL 60 of PAL video signals:

PAL 50 : is a normal signal and its PAL video signal is 50 fields (625 lines).

PAL 60 : is a special signal and its PAL video signal is 60 fields (525 lines).

Some TVs operate properly only with PAL 50 signals, some TVs operate properly with both PAL 50 and 60 signals.

Therefore, if your TV is switchable between PAL 50 (625 lines)/PAL 60 (525 lines), you can view an NTSC recorded tape in the PAL colour system with your own TV.

- Depending on the TV used, the picture may shrink vertically and black bars may appear both at the top and bottom of the TV screen. This is not an indication of malfunction.
- Variable speed playback (picture search, still, slow playback, etc.) may produce a skewed image and quite a bit of noise on the picture.
- If the tape pre-recorded in the SP tape speed mode is played back in the picture search mode, the picture may be reproduced with no colour.

#### Note

For viewing an NTSC-recorded tape, we recommend using an NTSC 4.43 TV.



# 3

## VARIABLE SPEED PLAYBACK

You can play back a tape at various tape speeds.

### Preparation


- Select the video channel or video input mode on the TV.

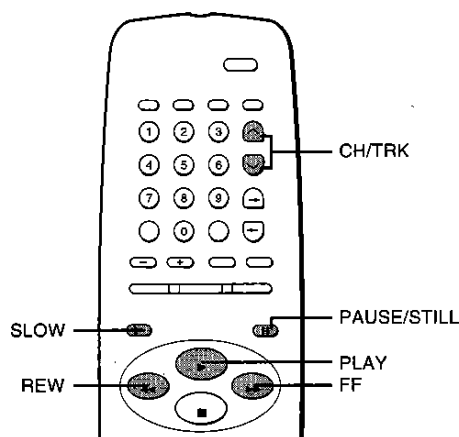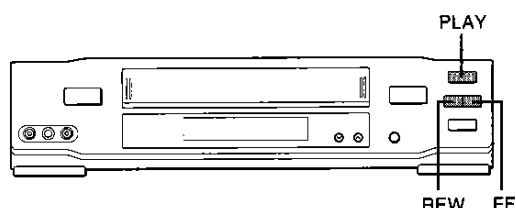


### Picture Search

This function allows you to quickly locate a particular scene or segment on the tape while monitoring the playback picture in the fast-forward or rewind mode.

- 1 During playback, press the **REW** or **FF** button. The tape runs at 5 times the normal playback speed.

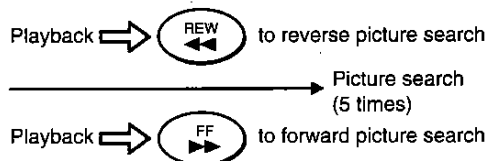

- 2 If you hold down the **REW** or **FF** button in the picture search mode, the searching speed increases.

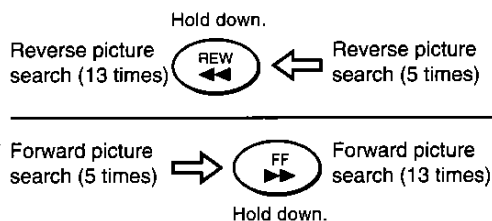

- When you release the button, the searching speed returns to the 5 times searching speed.

- 3 To resume normal playback, press the **PLAY** button.

#### Notes

- The picture will have some interference. This is not a defect in the unit.
- If you press the **REW** or **FF** button while rewinding or fast-forwarding the tape, the VTR enters the picture search mode. If you press the **REW** or **FF** button while picture searching, the VTR enters the rewinding or fast-forwarding mode, respectively.

### Still Picture

This function enables you to freeze a picture so that you can watch important scenes closely.

- 1 During playback, press the **PAUSE/STILL** button. The picture freezes.



- 2 To resume normal playback, press the **PAUSE/STILL** button.



The still picture mode will be released automatically after approximately 5 minutes. The VTR will then shift to the normal playback mode.

#### Adjusting still picture stability

If the still picture is distorted or flickers, hold down the **CH/TRK** button until the picture becomes stable.





#### Notes

- The distortion of the still picture may not be eliminated completely if the tape has been recorded on another VTR.
- The still picture may shake if a picture of a fast-moving object or scene is frozen. This is not a defect in the unit.
- If noise appears in the still picture, adjust the tracking manually in the slow-motion picture mode.

## Slow-motion Picture

This function has two variations: 1/6th and 1/12th the normal speed.

- 1 During playback, press the **SLOW** button. The tape will run at about 1/6th the normal playback speed.

Playback   to 1/6 slow

- 2 If you press the **SLOW** button again, the tape speed changes to 1/12 slow.

1/6 slow   to 1/12 slow

Each time you press the **SLOW** button, the speed changes between 1/6 and 1/12 alternately.

- 3 To resume normal playback, press the **PLAY** button.

1/6 slow or 1/12 slow   to normal playback

The slow-motion picture mode will be cancelled automatically after approximately 5 minutes. The VTR will shift to the normal playback mode.

### Adjusting the tracking in the slow-motion mode

If the slow-motion picture is noisy, hold down the **CH/TRK** button until the best picture is obtained.



### Notes

- The slow-motion picture may flicker up and down. This is not a defect in the unit.
- The noise in the slow-motion picture may not be eliminated completely by the tracking adjustment.

## Frame Advance

This function allows you to advance the picture frame by frame.

- 1 During playback, press the **PAUSE/STILL** button to put the VTR in the still picture mode.

Playback   to still picture

- 2 Press the **PLAY** button. The picture advances one frame each time you press the **PLAY** button.

Still picture   to frame advance



When the **PLAY** button is held down, the tape runs at 1/25th the normal playback speed.

- 3 To resume normal playback, press the **PAUSE/STILL** button.

# 3

## COUNTER FUNCTION

You can see the clock, linear tape counter or tape time remaining in the VTR display.

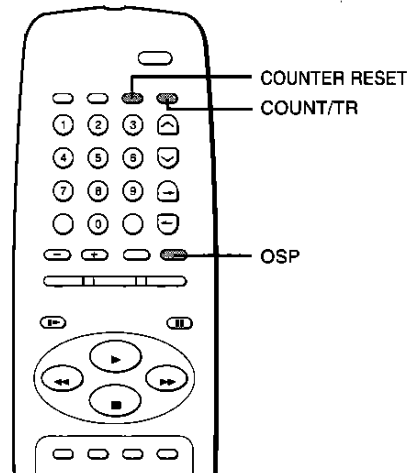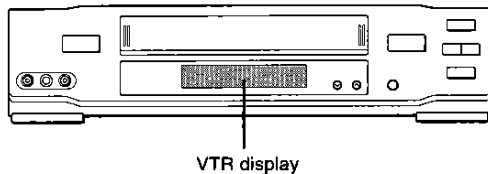

### Changing the Counter Display

Each time you press the **COUNT/TR** button, the display changes in sequence as follows:

Linear time counter	VTR display 1 25 00 hour minutes seconds
Tape time remaining	1 30 <sup>TM</sup>
Clock	15:30
Linear time counter	Linear time counter

#### To reset the linear time counter to "0H00M00S"

The counter is automatically reset to "0H00M00S" when a cassette is ejected. If you want to reset the counter at some other point, for example, when you start a new recording, just press the **COUNTER RESET** button.

#### Notes

- The linear time counter does not work on non-recorded portions of the tape.
- When the tape is ejected or the VTR is turned off, the linear time counter changes to clock display.
- If the tape rewinds back over "0H00M00S", "—" appears in the VTR display.
- The displayed time of the linear time counter is approximation.

### Tape Time Remaining

- Turn on the VTR and load a cassette.
- Press the **OSP** button.  
The MENU screen will appear on the TV.



- Press **number button 2** to select "VTR SETUP".



SETUP	
1 TAPE SELECT	(E180)
2 NTSC ON PAL TV	(ON)
3 COLOUR	(ON)
4 16:9	(OFF)
5 VIDEO PLUS+ EXTEND	(OFF)
SET=1-5	END=OSP

- Press **number button 1** and select a tape length, E180, 240, 260 or 300 depending on the tape to be used. Each time you press **number button 1**, the tape length changes.

- E180: when using an E-195 tape or shorter.
  - E240: when using an E-210 or E-240 tape.
  - E260: when using an E-260 tape.
  - E300: when using an E-300 tape.

- Press the **OSP** button twice to return to the normal TV screen.

- Press the **COUNT/TR** button.  
The tape time remaining is displayed. (See the chart on the left column.)

#### Notes

- The displayed time remaining is an approximation.
- It is necessary to set the tape length correctly beforehand in step 4 when you use the time remaining display.




# 3

## TIME SEARCH FUNCTION

The VTR fast-forwards or rewinds the tape by an amount of time you specified.

### Preparation

- Turn on the VTR.
- Select the video channel or video input mode on the TV.

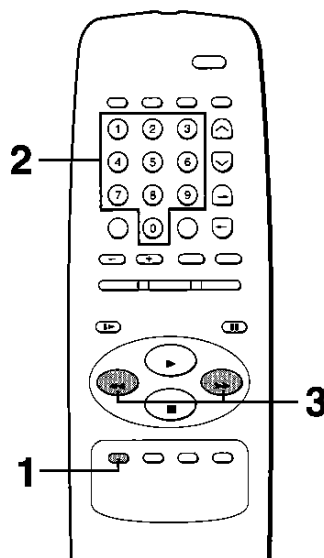



### Example

to move tape ahead 1 hour and 15 minutes

- 3 Press the **FF** or **REW** button within 10 seconds. Time search starts.

- 1 Press the **T. SEARCH** button in the stop mode or playback mode.

T. SEARCH

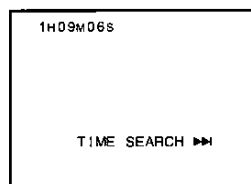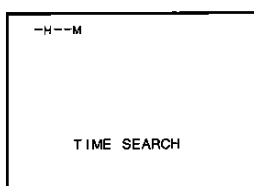


### Notes

- If you make a time search in the playback mode, playback will start after the search is completed.
- The displayed time is approximation.

- 2 Within 10 seconds, press **number buttons** to set the hours and minutes.

① → ① → ⑤

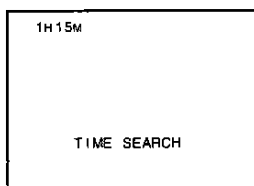

To set less than one hour, put 0 for the hours.


# 3

## INDEX SEARCH FUNCTION



You can easily locate the desired programme using the index signal registered on the tape.

### Information

**Index Search:** Plays back each programme with an index signal for about 5 seconds.

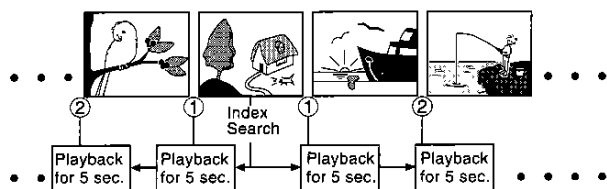

**Skip Search:** Finds and plays back a programme with an index signal you specified.

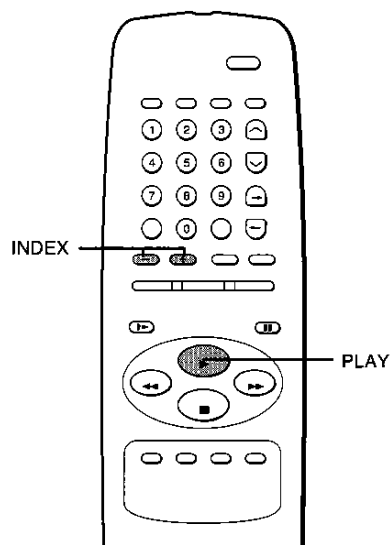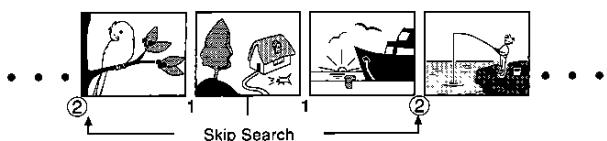

### Registering Index Signals Automatically

An index signal is automatically registered **when a recording starts**.

An index signal is also registered when one-touch timer recording or timer programme recording starts.


#### Note

An index signal is not registered automatically when the VTR is in the recording pause mode and recording restarts.

### Registering Index Signals Manually

**During recording**, index signals can be manually registered at desired points on the tape.

Press the **INDEX (+)** button at a desired point.

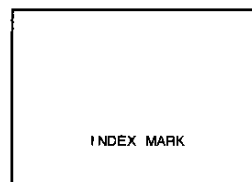

#### Note


When registering two or more index signals, certain intervals are required more than 1 minute.


## Index Search

This function plays back the tape for about 5 seconds at each index signal.

- 1 Load a cassette with the index signals registered.
- 2 Press the **INDEX** (–) or (+) button while in the stop or playback mode.

 : to search in the reverse direction

 : to search in the forward direction

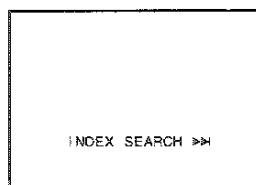

The VTR fast-forwards or rewinds the tape. When an index signal is found, the VTR plays back the tape for about 5 seconds, and then resumes fast-forwarding or rewinding. This operation is repeated at each index signal.

- 3 Press the **PLAY** button when the desired programme is found. Normal playback starts.



### Notes

- At the very beginning of the tape, the index search function may not work correctly.
- If you registered the index signals on a tape recorded on another VTR, the recording may be blurred at the index point and the index search may not work correctly.

## Skip Search

This function fast-forwards or rewinds the tape to the point at which the selected index signal is registered, and starts playback from there.

- 1 Load a cassette with the index signals registered.
- 2 Press the **INDEX** (–) or (+) button twice in the stop or playback mode.



SKIP SEARCH >> +01

- 3 Press the **INDEX** (–) or (+) button depending on the direction where your desired programme is located. Each time you press the (–) or (+) button, the number decreases or increases respectively.




SKIP SEARCH >> +05

The VTR starts to search for the point you specified with the (–) or (+) button. When the point is found, playback will start automatically.

### Notes

- You can set an index number up to  $\pm 20$ .
- The skip search is cancelled when the **PLAY** or **STOP** button is pressed.

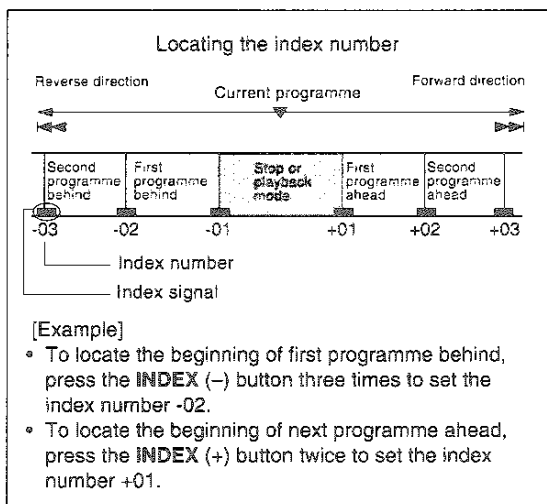



# 4

## RECORDING FROM A SATELLITE RECEIVER

If you are using a satellite receiver, you can connect it to this VTR to record a satellite programme.

### Preparation

- Turn on the VTR.
- Select the video channel or video input mode on the TV.
- Make sure your satellite receiver is connected to the VTR correctly.

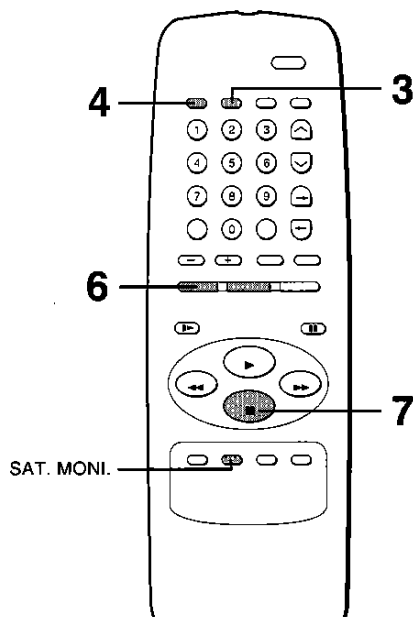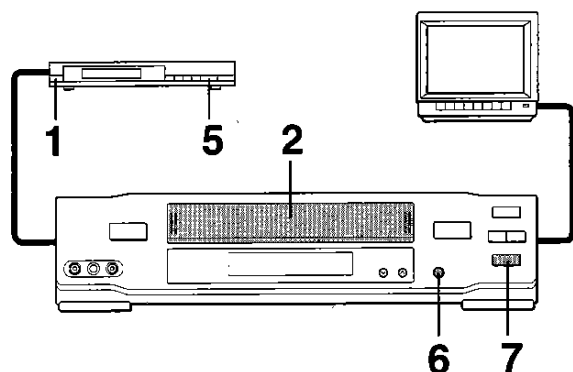

**1** Turn on the connected satellite receiver.

**2** Load a cassette with the safety tab attached.



**3** Press the **TV/VIDEO** button so that the "VIDEO" indicator will appear in the VTR display.



**4** Press the **INPUT SELECT** button so that "SA" will appear in the position number area.

 
 


Each time you press the **INPUT SELECT** button, the display changes as shown below.

→ TV (position number) → L 1 → L 2 → SA (satellite)

**5** Choose the satellite programme you want to record using the station selector on the connected satellite receiver. Make sure that selected programme is on the TV screen.

**6** Press the **REC** button on the VTR, or simultaneously press the two **REC** buttons on the remote controller. Recording starts.



**7** Press the **STOP** button when recording is finished.

## Satellite Monitor Function

You can watch a satellite programme from your connected satellite receiver even while the VTR is recording a TV programme, or is in the playback or stop mode.

### Preparation


Make sure that the satellite receiver, the TV and the antenna are connected properly, using the diagram "CONNECTION TO A SATELLITE RECEIVER".

### Important


This function only applies when the TV and the satellite receiver are connected to the VTR using the SCART socket.

## ■ WATCHING A SATELLITE PROGRAMME WHILE RECORDING A TV PROGRAMME

- 1) Follow steps 1 to 4 of "RECORDING A TV PROGRAMME" and record a TV programme.

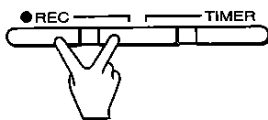

 - 2) Press the **SAT. MONI.** button. The "MONI" indicator appears.



Each time you press the **SAT. MONI.** button, the "MONI" indicator goes on and off.

- 3) Choose the satellite programme you want to watch on the connected satellite receiver.

## ■ WATCHING A SATELLITE PROGRAMME WHILE THE VTR IS IN THE PLAYBACK OR STOP MODE

 
- 1) Press the **SAT. MONI.** button so that the "MONI" indicator will appear in the VTR display.
- 2) Press the **TV/VIDEO** button so that the "VIDEO" indicator will appear in the VTR display.
- 3) Choose the satellite programme you want to watch on the connected satellite receiver.

### Notes


- When OSP mode (ex. the MENU screen is displayed) is set, the satellite monitor function is cancelled.
- The satellite monitor function is also available in the timer programme recording mode, the timer standby mode, or the one-touch timer recording mode.

## ■ WATCHING A TV PROGRAMME WHILE RECORDING A SATELLITE PROGRAMME

- 1) Follow steps 1 to 6 of "RECORDING FROM A SATELLITE RECEIVER", and record a satellite programme.



 - 2) Press the **TV/VIDEO** button so that the "VIDEO" indicator disappears in the VTR display.



- 3) Choose a TV programme you want to watch on your TV handset while recording a satellite programme.

# 4

## Video Plus+

This VTR is equipped with the Video Plus+ programming system. This system allows you to set up easily for unattended recording.

### Information

Before making a Video Plus+ recording, it is necessary to set GUIDE channels to the VTR, except for normal TV stations - no need to do anything.


### Preparation

- Select the video channel or video input mode on the TV.
- Turn on the VTR.

### Note

The recording systems below are also available on this VTR other than the Video Plus+ recording.

- One-touch timer recording
- Timer programme recording

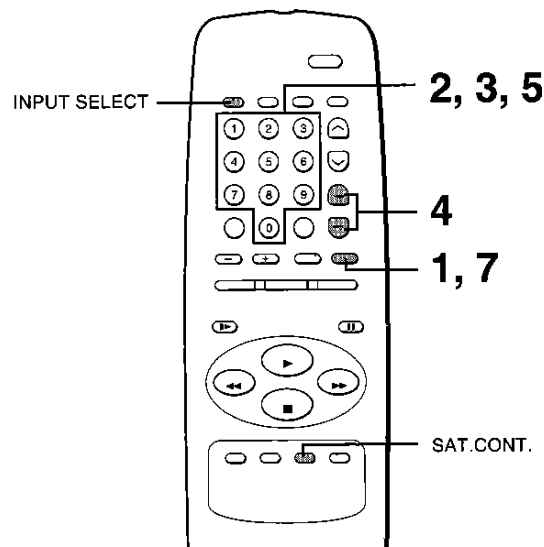


## GUIDE Channel Setting


### Important

Make sure that the TV stations have been tuned to the position numbers (1 for BBC1, 2 for BBC2, 3 for ITV and 4 for CHANNEL 4) on the VTR.


- 1 Press the **OSP** button

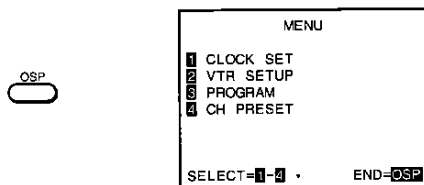

- 2 Press number button 4.

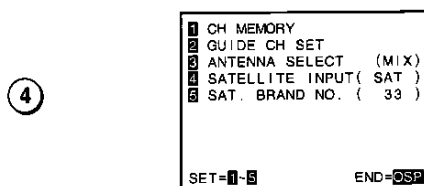

- 3 Press number button 2.  
The GUIDE CH P. screen appears.

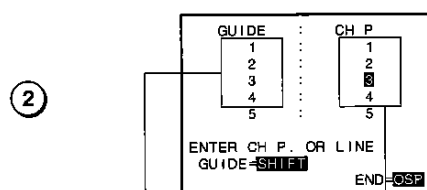


Fixed GUIDE channels for TV stations  
1: BBC1 2: BBC2  
3: ITV 4: CHANNEL 4  
No need to change.

Position numbers factory set for the TV stations.  
No need to change.

It is not necessary to set the GUIDE channels for BBC1, BBC2, ITV and CHANNEL 4, since they have already set as shown in step 3.  
If you want to use Video Plus+ recording for programmes of other stations, eg. Satellite proceed to step 4 on next page.  
If not, press the **OSP** button twice to complete the setting.

- 4 Press the **SHIFT** button to select the "GUIDE" channel for a desired satellite station.

**Example :** to set a GUIDE channel 101 for SKY ONE

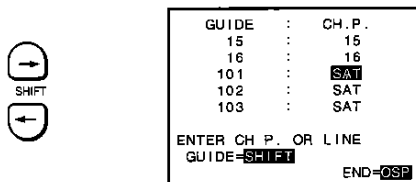

- 5 Set the "CH P." column.  
Use the procedure **A)** or **B)** according to whether the "Satellite Receiver Control" function is available on your satellite receiver or not.

When **available** – your satellite receiver has its brand in the list and can use the satellite receiver control function, use **A)**.


When **not available** – your satellite receiver does not have its brand in the list, use **B)**.

- A) Using this setting, the VTR can make a Video Plus+ recording of satellite programmes whilst you are absent, selecting automatically satellite channels as you have set.**


**Important**

To use this function, make the procedures for the "SATELLITE RECEIVER CONTROL".

- 1) Press the **SAT. CONT.** button.  
[SA] appears in the "CH P." column.

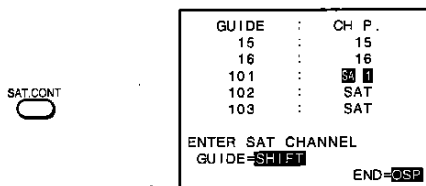


- 2) Enter a channel of the satellite station using **number buttons**.  
If SKY ONE is channel 15 . . .

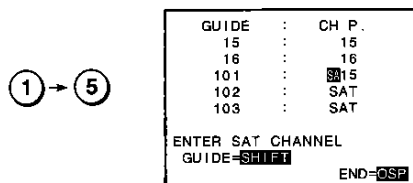




Proceed to step 6.

- B) The VTR cannot select automatically satellite channels in the Video Plus+ recording mode. It is necessary to select a desired satellite channel using the station selector on your satellite receiver when you make a Video Plus+ recording.**

 Set the "CH P." column using the **INPUT SELECT** button according to the connection of your satellite receiver and the VTR.



If your satellite receiver is connected via . . .

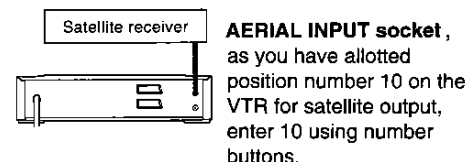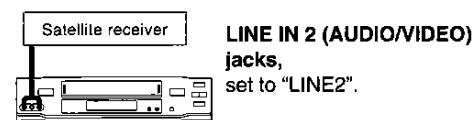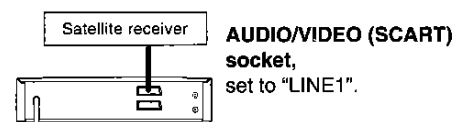

- 6 To set GUIDE channels for other satellite stations, follow steps 4 and 5.

- 7 Press the **OSP** button three times, to return to normal TV screen.  
GUIDE channel setting is all completed.

Your Video Plus+ programming is now ready to use.

# 4

## Video Plus+


After having setting GUIDE channels, you can perform Video Plus+ recording using the PlusCodes.

### Information

You can perform timer recording very easily using the Video Plus+ programming system of this VTR. You simply enter the PlusCodes carried in the daily newspapers or TV magazines.

### Preparation

- Make sure that the clock is set correctly.
- If you record from a satellite receiver, make sure that the connection is made correctly.

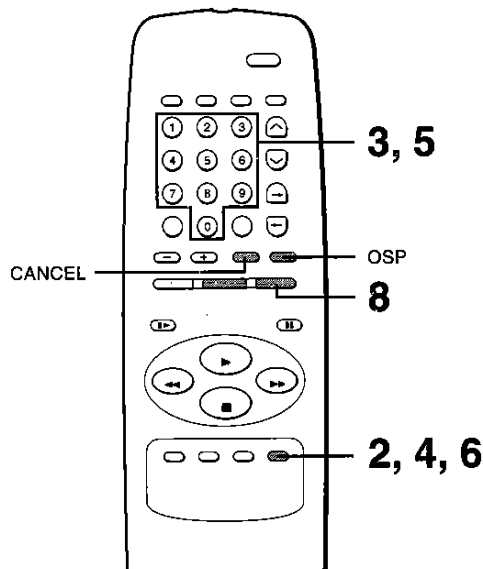

### Setting Time Extension

Before making a Video Plus+ recording, set possible time extension for the recording to allow for a programme overrunning. You can extend the recording time in 10 minute increments up to 60 minutes.


- 1) Press the **OSP** button.  
The MENU screen appears on the TV.



- 2) Press **number button 2** to select "VTR SETUP".



- 3) Press **number button 5** repeatedly to set desired time extension.

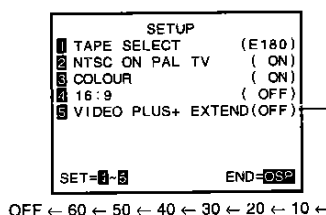


### Notes

- Extend time should be set before starting Video Plus+ recording procedure.  
The time extending doesn't work on recording programmes already memorized.
- When you do not use time extension for Video Plus+ recording, set to "OFF" on the SETUP screen.

### Video Plus+ Recording Procedure



- 1 Load a cassette with the safety tab attached.
- 2 Press the **VIDEO PLUS+** button.

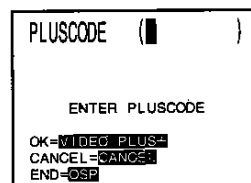

- 3 Enter the PlusCode.

**Example :** to record a TV programme beginning at 20:30 on 8, October, 1994 with PlusCode 74427 (fiction).

 Press **number button 7, 4, 4, 2 and 7**.  
Confirm that the entered number is correct.

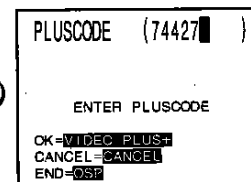


### Correcting a mistake:

- Press the **CANCEL** button. The current PlusCode is cleared.
- Re-enter a correct PlusCode.




- 4** Press the **VIDEOPLUS+** button.  
The TV screen changes as follows:  
(Some TV programmes may not require the selection on the screen below, and skip automatically to step 6 when its PlusCode is entered.)

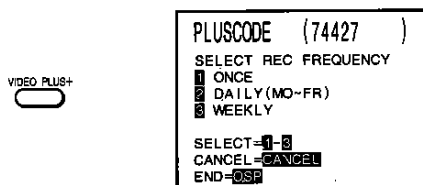

**ONCE:** one-time recording.  
**DAILY(MO~FR):** records TV programmes on the same TV station at the same time Monday through Friday.  
**WEEKLY:** records TV programmes on the same TV station at the same time on the same day every week.

- 5** To select "ONCE" for example, press **number button 1**.  
The "ONCE" programming has been made automatically.  
Programme details are shown.

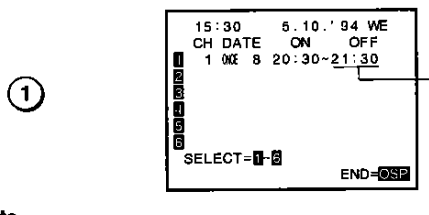


 
**Note**  
When you set 10 minutes time extension on the **SETUP** screen, the "OFF" displays 21:40.

- 6** Press the **VIDEO PLUS+** button.  
Programme setting is now memorized.




- 7** To enter other PlusCodes, follow steps 2 to 6.


- 8** Finally press the two **TIMER** buttons simultaneously.  
The VTR enters the timer standby mode and  indicator lights up.



### **Recording or Playback in the Timer Standby Mode**

 When you want to use the VTR while it is set to the timer standby mode, proceed as follows:

- 1)** Press the **TIMER** buttons simultaneously.  
 indicator goes off.




- 2)** Press the **ON/STANDBY** button to turn on the VTR and operate the VTR as usual.  
**3)** After operating the VTR, press the **TIMER** buttons.  
The VTR returns to the timer standby mode.

Finish normal use of the VTR before the preset recording start time, since the timer only works when the VTR is in the timer standby mode.


**Confirming the Video Plus+ Timer Programmes**

- To confirm the Video Plus+ recording programme before the VTR enters the timer standby mode (⏻ indicator not lit)

- 1) Press the **OSP** button.

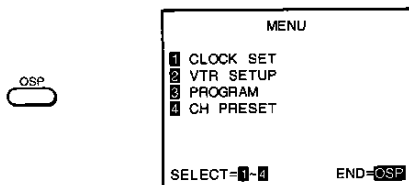

- 2) Press number button 3.

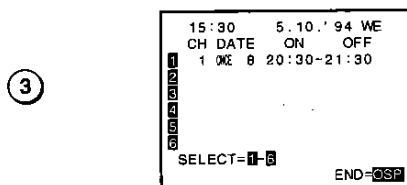


Check your programme data.

- 3) Press the **OSP** button twice.  
The TV screen returns to the normal screen.

- To confirm during the timer programme recording (⏻ indicator lit)

Press the **OSP** button so that the screen for confirming appears. After about 30 seconds, the screen disappears.

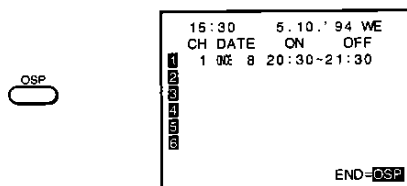
**Cancelling the Video Plus+ Timer Programmes****Preparation**

If the VTR is set to the timer standby mode, (⏻ indicator lit), press the **TIMER** buttons to release it and press the **ON/STANDBY** button.

- 1) Press the **OSP** button to display the MENU screen.

- 2) Press number button 3.

3

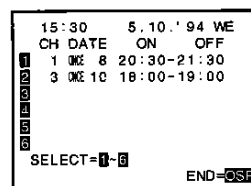

- 3) Select a programme number which you want to cancel by using number buttons.

1 . . . 6

- 4) Press the **CANCEL** button.  
The selected programme data is cancelled.

CANCEL

- 5) Press the **OSP** button.

- 6) If necessary, i.e. you still have a programme to record, press the **TIMER** buttons to return to the timer standby mode.

## Changing the Video Plus+ Timer Programmes

### Preparation

 
First cancel the timer programme. (See "Cancelling the Video Plus+ Timer Programmes".)

- 1) Press the **VIDEO PLUS+** button so that the **PLUSCODE** screen appears.
- 2) Press the two **TIMER** buttons simultaneously to enter the timer standby mode.

### Overlaps the programme

If two programmes overlap, the recording start time of programme 2 has a priority over the recording end time of programme 1.

**Example:** when programme 2 overlaps programme 1



### Error indicators

When the "FULL (CLEAR PROG?)" message appears on the TV during programming, no more programmes can be entered. If you want to add another programme, delete one existing programme on the screen by using number button.

If impossible PlusCode is entered, "INVALID CODE ENTERED" blinks on the screen to tell you that the recording cannot be performed. Press the **CANCEL** button to clear the PlusCode number and enter correct one.

If "CLASH" message appears on the screen during programming, it tells you that two programmes with the same recording start time have been entered. You have to make a correction. On this screen, blinking item number means that the item has been entered later.

- 1) Press a **number button** corresponding to the item to be cancelled. The selected item has been cleared.
- 2) Press the **VIDEO PLUS+** button.
  - If the **PLUSCODE** screen appears:  
Confirm the programme on the screen and press the **VIDEO PLUS+** button.  
The programme is memorized and the normal screen appears.
  - If the normal screen appears:  
It means that your programme has been already memorized. No need to make a further setting.

# 4

## TIMER PROGRAMME RECORDING


The programmable timer allows you to record up to 6 different programmes over one month. This function is convenient when you are away from home or when you are busy.

### Information

The item to be set blinks. Set the data with the number buttons, following the blinking position. You can change the blinking position by pressing the SHIFT (→/←) buttons.

### Preparation


- Turn on the VTR.
- Select the video channel or video input mode on the TV.
- Make sure that the clock is set correctly.

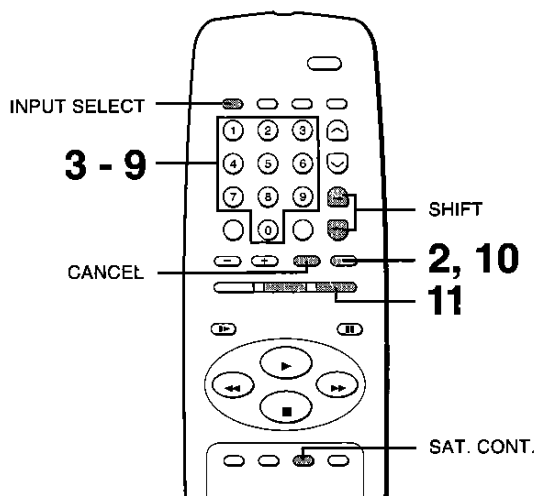


### Example

to record a programme of a station stored on position number 1 (eg. BBC1) from 20:30 until 21:30 on October 8. Today is October 5.

 - 1 Load a cassette with the safety tab attached.




- 2 Press the OSP button.

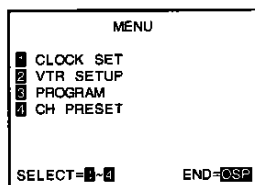


- 3 Press number button 3.

3

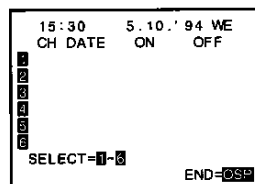


- 4 Select programme number 1.

1

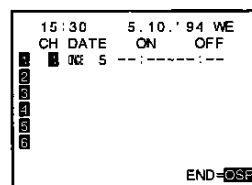

- 5 Select position number 1. Press number button 0 and 1.


0 → 1

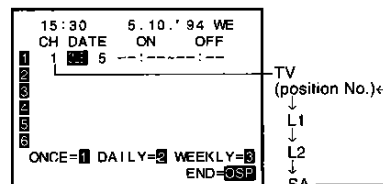

You can make a timer programme recording of a source programme from other equipment connected to this VTR using the **INPUT SELECT** button.

- L1 : to record from other equipment connected to the AUDIO/VIDEO (SCART) socket on the rear panel of this VTR.
- L2 : to record from other equipment connected to the LINE IN 2 jacks on the front panel of this VTR.
- SA : to record from the satellite receiver connected to the SATELLITE (SCART) socket on the rear panel of this VTR.

 If you press the **SAT. CONT.** button, the VTR enters the satellite receiver control mode and "[SA]" is displayed. Enter a desired satellite station.



### Correcting a mistake

Press the SHIFT (←) button to reverse the blinking position until the number you set incorrectly blinks. Correct the number with the number buttons and press the SHIFT (→) button to return the blinking digit.

- 6** Select a one-time recording.  
You can also set daily and weekly timer recordings.

①

15:30	5.10.'94 WE
CH DATE	ON OFF
1 00 05	-----
1	
2	
3	
4	
5	
6	
7	
8	
9	
0	
END=OSP	

- 7** Set the recording date.

① → ⑧

15:30	5.10.'94 WE
CH DATE	ON OFF
1 00 8	-----
1	
2	
3	
4	
5	
6	
7	
8	
9	
0	
END=OSP	

- 8** Set the hours and minutes of the recording start time.

② → ① → ③ → ①

15:30	5.10.'94 WE
CH DATE	ON OFF
1 00 8	20:30-----
1	
2	
3	
4	
5	
6	
7	
8	
9	
0	
END=OSP	

- 9** Set the hours and minutes of recording end time.

② → ① → ③ → ①

15:30	5.10.'94 WE
CH DATE	ON OFF
1 00 8	20:30~21:30
1	
2	
3	
4	
5	
6	
7	
8	
9	
0	
SELECT=1-8	
END=OSP	

 
To set another programme, follow steps 4 to 9. (For this example, since programme number 1 is already used, set another programme using programme numbers 2, 3 . . . 6 in step 4.)

- 10** Press the **OSP** button.  
Programme setting is completed.



MENU	
1	CLOCK SET
2	VTR SETUP
3	PROGRAM
4	CH PRESET
SELECT=1-4	
END=OSP	

- 11** Press the two **TIMER** buttons simultaneously.



The power will be turned off and the VTR enters the timer standby mode.

15:30
-------

# 4

## TIMER PROGRAMME RECORDING

### Daily and Weekly Recording

#### ■ Daily timer programme recording

You can record TV programmes on the same TV station at the same hour Monday through Friday.

- 1) In step 6, press **number button 2** to select "DAILY".

②

15:30	5.10.'94	WE
CH	DATE	ON OFF
1	MO-FR	-----
END=OSP		

- 2) Skip step 7.
- 3) Perform steps 8 to 11.

#### ■ Weekly timer programme recording

You can record TV programmes on the same TV station on the same day every week.

- 1) In step 6, press **number button 3** to select "WEEKLY".

③

15:30	5.10.'94	WE
CH	DATE	ON OFF
1	WE	-----
SU=1 MO=2 TU=3 WE=4 TH=5		
FR=6 SA=7		
END=OSP		

- 2) Press **number button 1 to 7** to select the day of the week.  
For example, if you press **number button 2** to select "MO", you can record the programme on the same TV station on the same time every Monday.

②

15:30	5.10.'94	WE
CH	DATE	ON OFF
1	WE MO	-----
END=OSP		

- 3) Skip step 7.
- 4) Perform steps 8 to 11.

### Confirming the Timer Programmes

#### To confirm during the timer programme recording (⊕ indicator lit)

Press the **OSP** button so that the screen for confirming appears. After about 30 seconds, the screen disappears.

OSP

15:30	5.10.'94	WE
CH	DATE	ON OFF
1	WE	20:30-21:30
END=OSP		

### Changing the Timer Programme

#### Preparation

If the VTR is set to the timer standby mode (⊕ indicator lit), press the **TIMER** buttons to release it and press the **ON/STANDBY** button.

- 1) Perform step 2 to 11 of the timer programme setting procedure, to correct timer programme data.
  - In step 4, select a programme number which you want to correct.
- 2) Press the **TIMER** buttons simultaneously to return the VTR to the timer standby mode.


## Cancelling the Timer Programmes

### Preparation

If the VTR is set to the timer standby mode (⏻ indicator lit), press the **TIMER** buttons to release it and press the **ON/STANDBY** button.

- 1) Press the **OSP** button to display the MENU screen.
- 2) Press **number button 3**.

③

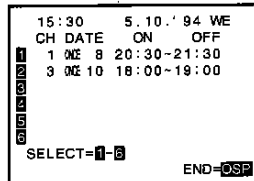

- 3) Select a programme number which you want to cancel by using number buttons.

① . . . ⑥

- 4) Press the **CANCEL** button.
   
The selected programme data is cancelled.



- 5) Press the **OSP** button.
- 6) If necessary, press the **TIMER** buttons to return to the timer standby mode.

## Additional Information

### Error indicator

The "E" (error) indicator appears in the VTR display if you press the **TIMER** buttons when:

- a cassette is not loaded.
- a cassette without a safety tab is loaded.
- a cassette with a safety tab is loaded and no timer programmes are set on the VTR.

In these cases, a recording will not be made.

 
### If a power failure occurs during timer programme recording

- After a power failure of short duration, the colon between the hour and minute digits blinks in the VTR display. This indicates that the timer programmes are still in the memory of the VTR.
- After a power failure of long duration, 0:00 blinks in the VTR display. This indicates that the timer programmes have been cleared. Reset the clock and timer programmes on the VTR.

### Overlap of the programmes

If two timer programmes overlap, the recording start time of programme 2 has priority over the recording end time of programme 1.


**Example :** when programme 2 overlaps programme 1



## Recording or Playback in the Timer Standby Mode

When you want to use the VTR while it is set to the timer standby mode, proceed as follows:

 - 1) Press the **TIMER** buttons simultaneously.
   
⏻ indicator goes off.



- 2) Press the **ON/STANDBY** button to turn on the VTR and operate the VTR as usual.
- 3) After operating the VTR, press the **TIMER** buttons.
   
The VTR returns to the timer standby mode.

Finish normal use of the VTR before the preset recording start time, since the timer only works when the VTR is in the timer standby mode.

# 4

## SATELLITE RECEIVER CONTROL

The VTR can directly control station selecting of the connected satellite receiver.


 
### Information

The following settings are required to control your satellite receiver by this VTR.

- 1) Placing the Satellite Receiver
- 2) Setting the Satellite Receiver Brand Code
- 3) Setting the Satellite Receiver Control


### Important

- First perform "Placing the Satellite Receiver".
- Keep the connected satellite receiver turned on.

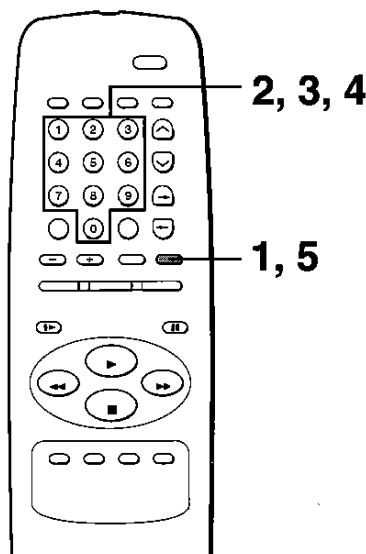


### Setting the Satellite Receiver Brand Code


- 1 Press the **OSP** button.

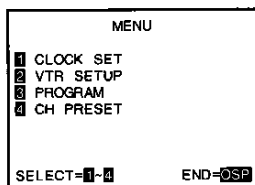

- 2 Press number button 4.

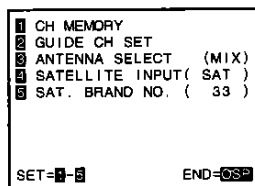


- 3 Press number button 5.

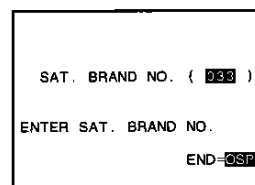

- 4 Press **number buttons** to enter three figures of the brand code for your satellite receiver.

**Example:** to enter brand code 2.

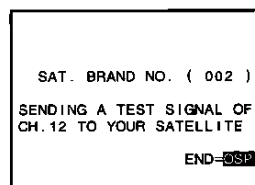

When you enter the brand code, the VTR sends a test signal to the satellite receiver to make sure that the brand code has been entered correctly. The signal will set the satellite channel to 12. Accordingly, if channel 12 is displayed on your satellite receiver, it means the brand code is set correctly. Several codes may be allocated to one brand. Enter one after the other so that the channel shows 12.

- 5 After having confirmed that the channel of the satellite receiver is 12, press the **OSP** button three times to return to the normal TV screen.



**Table of Satellite Brand Code**

Brand name	Brand code
TOSHIBA	33
ALBA	1, 2, 9, 16, 65, 66
ALDES	88
ALLSAT	9, 16, 23
AMSTRAD	3, 4, 5, 55, 56, 76, 77, 89, 90, 91
ARMSTRONG	43
BEST/DISKEXPRESS	26
BIG BROTHER	7, 8
BUSH	2, 9, 16, 65, 66
CABLE STAR	101, 102, 103, 104
CABLETIME	101, 102, 103, 104
CHANNEL MASTER	2, 3, 10
D2MAC DECODER	72
DECSAT/C+ SAT.	72
DRAKE	45
ECHOSTAR	13, 14, 92, 93, 94
FERGUSON	9, 15, 16, 17, 23, 38, 39, 59, 108
FUBA	49, 69, 70, 78, 96
GI	105, 106, 107, 108, 110
GRUNDIG	17, 19, 28, 71
HIRSCHMANN	11, 19, 47, 48
HUTH	74
IMPULSE	105, 106, 107, 108, 110
ITT/NOKIA	17, 26, 27, 50, 51, 52
JERROLD	105, 106, 107, 108, 110
KATHREIN	12, 16, 20, 24, 29, 31, 46, 73, 97
LENCO	49
MACOM	111
MASPRO	17, 20, 64, 67
MIMTEC	21
MORGAN	43

Brand name	Brand code
NAGAI PALSAT	95, 96
NEC	22, 57
NETWORK	9, 16
NORDMENDE	17
OAK	112, 113, 114, 115
PACE	9, 16, 17, 23, 38
PANASONIC	17, 61
PHILIPS	16, 24, 46, 73
REDIFFUSION	25
REVOX	21
SAKURA	62, 63, 68
SALORA	17, 26, 27, 50, 51, 52
SAMSUNG	36
SCHWAIGER	23, 43
SCIENTIFIC ATLANTA	116, 117, 118
SEEMANNS	23
SENTRA	10
SONY	30
STRONG	31
TATUNG/NIKKO	32, 54, 58, 80, 81
TECHNISAT	40, 41, 92, 93
TELEDIREKT	23
TEXSCAN	119, 120
THOMSON	7, 17, 39
TRISTAR	31
UNIDEN	67
VIDEOTRON	105, 106, 107, 108, 109, 110, 121
VIDEOWAY	105, 106, 107, 108, 109, 110, 121
VISIOPASS	16, 24, 46, 73
VORTEC	36
WISI	35, 37, 44, 93

- For some brands, several brand codes are allocated.
- Some satellite receivers may not be operated at all with this VTR.

# 4

## SATELLITE RECEIVER CONTROL



### Information

You can select satellite stations by operating this VTR. It is also possible to change automatically satellite stations according to your programme setting in the timer programme recording mode. See "TIMER PROGRAMME RECORDING".

### Important

- Perform "Setting the Satellite Receiver Brand Code" beforehand.
- Keep the connected satellite receiver turned on.


Satellite receiver

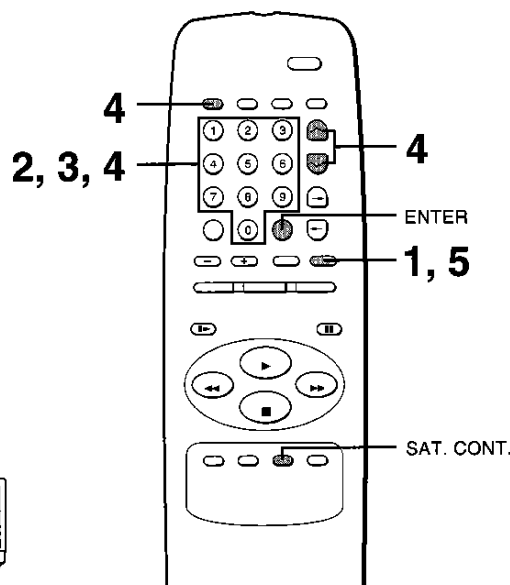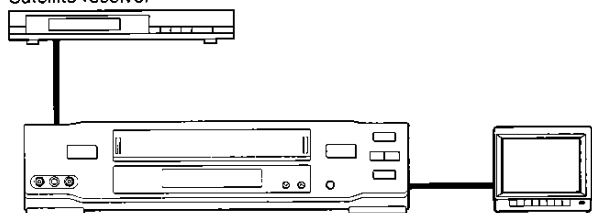

### Placing the Satellite Receiver

Put the satellite receiver on the top of the VTR as shown below.

Do not block the sensor window.

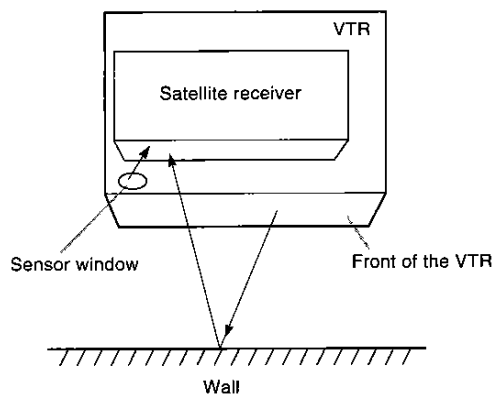


The infrared signals come out of the sensor window and the front of the VTR, and they bounce off walls and objects in the room and are received by the satellite receiver. The VTR sends out infrared control signals to your satellite receiver even during timer programme recording.

### Note


If the satellite receiver cannot be controlled properly because the infrared signals fail to reach it, change the position on the VTR so that it can receive the signals enough.

### Setting the Satellite Receiver Control


- 1 Press the **OSP** button.

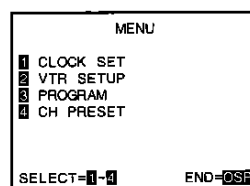

- 2 Press number button **4**.

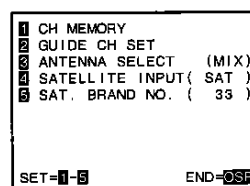


- 3 Press number button **4**.

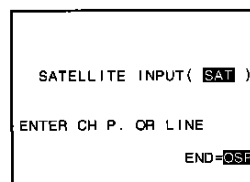


- 4** Set the position number or line input mode depending on your satellite receiver connection.  
If your satellite receiver is connected via . . .

the **SATELLITE (SCART)** socket on the VTR, press the **INPUT SELECT** button to select "SAT".

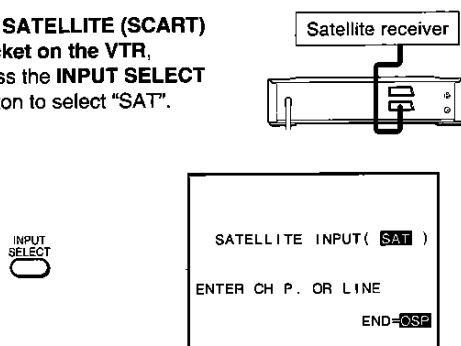

the **AERIAL INPUT** socket, press the **INPUT SELECT** button, and then set the position number on which you stored the satellite output (e.g. 10) by using the **CH/TRK** or **number** buttons.

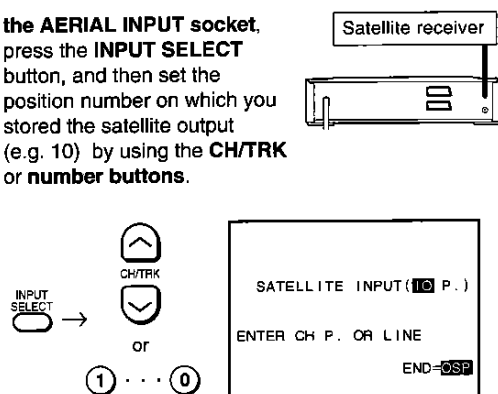


- 5** Press the **OSP** button three times to return to the normal TV screen.  
The satellite receiver control function is ready to use.

## Using the Satellite Receiver Control
 
### ■ SELECTING SATELLITE CHANNELS WITH THE REMOTE CONTROLLER OF THE VTR

- 1) Press the **SAT. CONT.** button to make "SAT", "SA" appear in the VTR display.



- 2) Select a desired satellite channel using **number** buttons.

Ways of use may differ. Check how they work on your satellite receiver.

Ex. to select satellite channel 3.

- Press **number button 0** and **3**.
- Press **number button 0, 3** and the **ENTER** button.
- Press the **ENTER** button and **number button 3**.

Ex. to select satellite channel 16.

- Press **number button 1** and **6**.
- Press **number button 1, 6** and the **ENTER** button.
- Press the **ENTER** button twice and **number button 1, 6**.

### Important

Some satellite receivers may not respond to all of the operations above, or may not be operated at all with this remote controller. In such a case, operate the satellite receiver with its own remote controller.

### Notes

- Each time the **SAT. CONT.** button is pressed, this function goes on or off.
- To make a position number appear in the VTR display after you have cancelled this function, press the **INPUT SELECT** button.

### ■ CHANGING SATELLITE CHANNELS AUTOMATICALLY IN THE TIMER PROGRAMME RECORDING MODE

See "TIMER PROGRAMME RECORDING".

### Note

Keep the satellite receiver turned on even while the VTR is in the timer programme recording mode.

# 4

## 16:9 (WIDE SCREEN) COMPATIBILITY


The VTR automatically adjusts the image to fill the wide TV screen when recording or playing back a wide TV programme via the connected satellite receiver, etc.

### Information


When you play back a tape commercially available which is recorded in the wide screen format, or when you record or play back a wide TV programme via the connected satellite receiver, etc., the VTR automatically adjusts the image to fill the wide TV screen.


### Important

Connect equipment compatible with wide screen, to the VTR using the SCART cable.

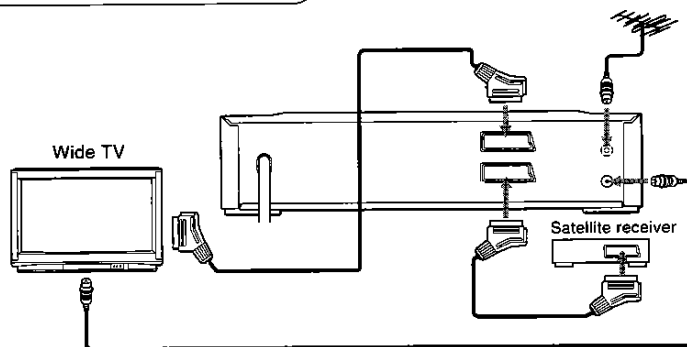

### Wide TV and normal TV on this function

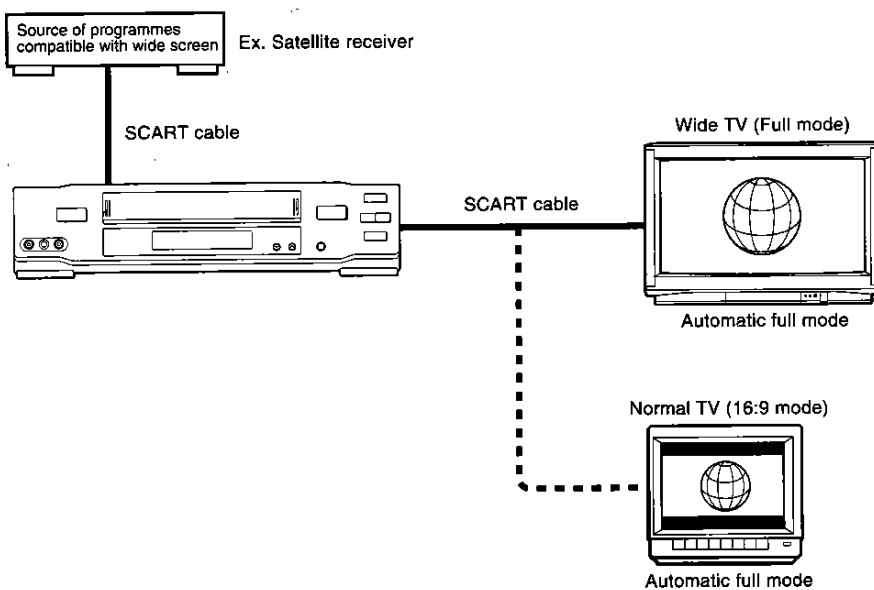


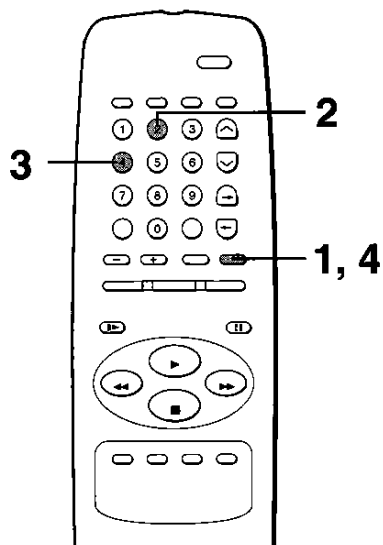

### Setting of 16:9 Wide Screen


Make the setting when you record or play back a wide TV programme.

- 1** Press the **OSP** button.

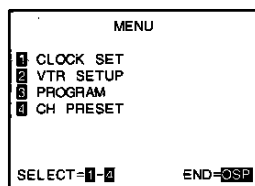


- 2** Press **number button 2**.

②

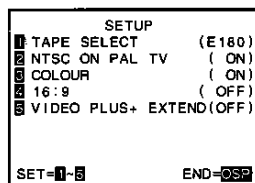

- 3** Press **number button 4** to set "16:9".

④

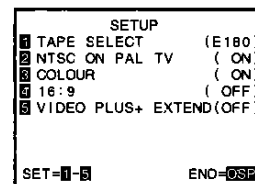

OFF: Set if you do not use a wide TV.

AUTO: Set when you use a wide TV. The VTR automatically detects wide TV programmes and normal TV programmes.

ON: The VTR is set usually in the mode compatible with 16:9 wide screen. Set if the VTR cannot detect wide TV programmes with "AUTO" set.

- 4** Press the **OSP** button twice to return to the normal TV screen.

# Instructions for Installing the Optical Infrared Transmitter

The satellite receiver can be controlled through the use of the Optical Infrared Transmitter (Part number: 70148859).


## ■ Installation and Position Setting

When setting up the brand of the satellite receiver, place the transmitter in such a position that the channel display of the satellite receiver will be changed to 12.


- Select a position where the transmitter is near the remote control sensor of the piece of that needs to be controlled.
- Be careful that the transmitter and its cord do not touch any doors when they are opened and closed.

## AD Fixing Method

1. Stick one face of the double-sided adhesive tape on the bottom of the transmitter.
2. After checking the proper operation of the satellite receiver, peel the cover off the adhesive tape attached to the transmitter and place the transmitter in position.


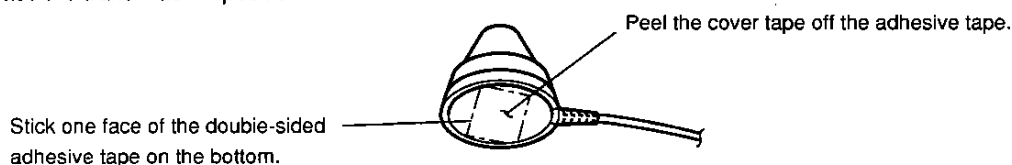


## Example of Installation

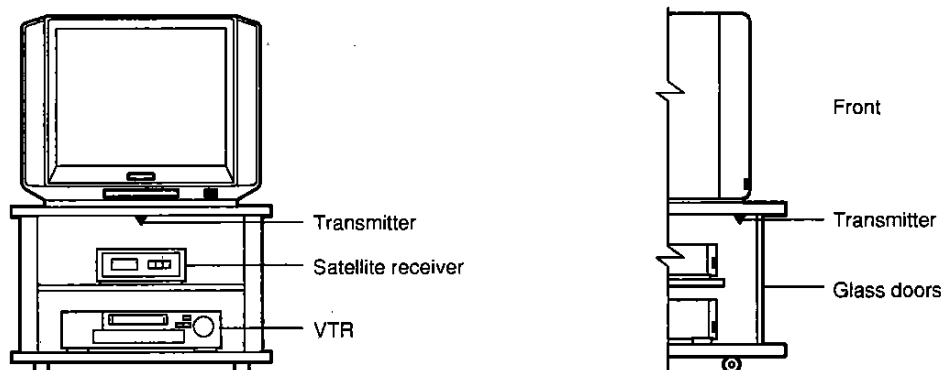

If a rack or TV table are not available or if there is not enough space for installation, use the supplied spacer for installing the transmitter.

## Example of Installation

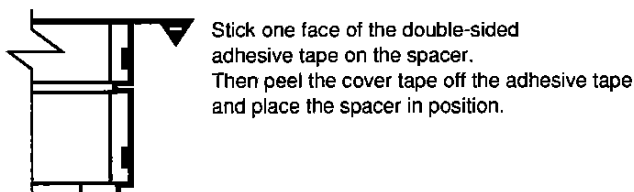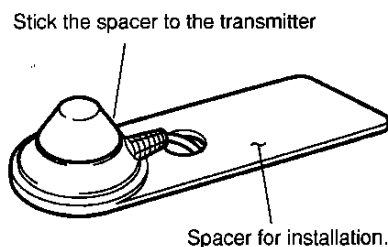

## Notes:

- Set the transmitter installation position so that the distance from the remote control sensor falls within 50 cm. (21 inches)
- Make sure that the remote control sensor of the satellite receiver operates properly if the transmitter is moved slightly.